

ThinkTop setup utilising IR keypad



General

Flashing LED means no value set. Steady LED means value set as shown.

Default: Step 2, factory-set tolerance band +/- 5 mm
Step 3-8, disabled

D LED: Active during set-up: Flashing in step 1
Steady in all other steps

Or during operations, error condition: Steady showing hardware fault, indication pin out of range
Flashing showing software fault

Timeout: A 60 sec. timeout is started as soon as any button(s) are released
On timeout the setup is exited with no changes saved

IR Keypad: Remote distance 0-300 mm to ThinkTop®

Symbols

Push key on IR keypad with the same number

Simple representation of LED indication:

Yellow	B	<input type="checkbox"/>	
IR-Receiver		<input type="radio"/>	
Red	D	<input checked="" type="checkbox"/>	Steady LED
Yellow	C	<input type="checkbox"/>	
Green	E	<input type="checkbox"/>	
Orange	F	<input type="checkbox"/>	
Yellow	A	<input checked="" type="checkbox"/>	Flashing LED



General commands in each step (except step 1):

<input type="checkbox"/> 0	Next step / skip step	(In step 3-6 the program automatically moves to the next step when a position is stored)
<input type="checkbox"/> 5	Clear / disable step	(In step 2 this resets the unit and sets the step 2-8 to default) (The command is accepted when all unit LED's flash briefly)

It is recommended to reset the unit before
performing a setup.
Always check for correct signals after the setup.



